


## C7061A/F DYNAMIC SELF CHECK ULTRAVIOLET FLAME DETECTOR

### PRODUCT HANDBOOK

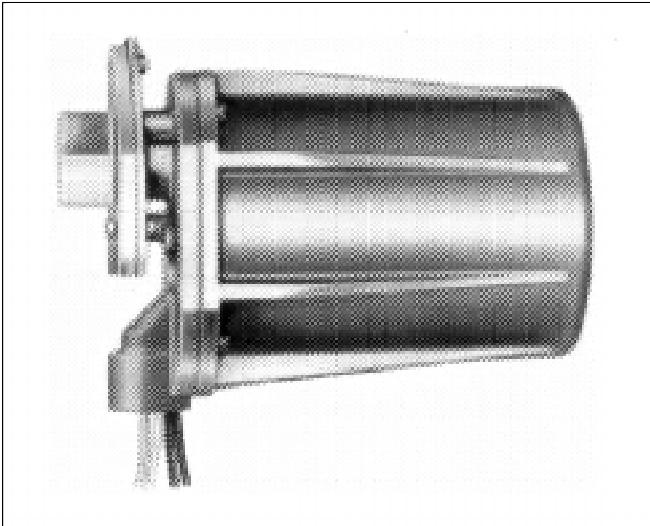

### APPLICATION

The C7061A is a dynamic self-checking flame detector for sensing the ultraviolet radiation generated by the combustion of gas, oil, or other fuels.

This flame detector is available in two versions: model C7061A for use in standard applications, and model C7061F for use in installations requiring explosion-proof packaging.

The flame detector is designed for use with either, R7061\* Dynamic self-check ultraviolet amplifier and


- R4348 Flame Switch or,
- R7241 Microcomputer burner control system

or with,

- R7861A\* Dynamic self-check ultraviolet amplifier and,
- 7800 SERIES Burner Programmers

These configurations provide a closed-loop, self-checking circuit which insures the integrity of both amplifier and flame detector. Improper response to simulated flame loss results in a safety shutdown and/or alarm.

\* See Table Applicable flame signal amplifiers.

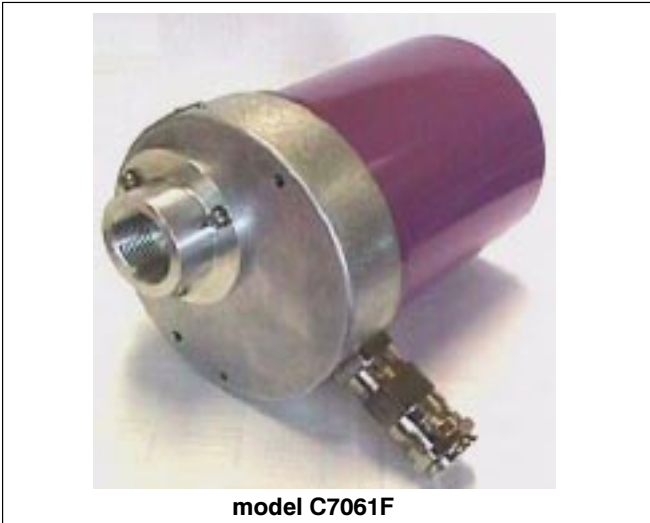

model C7061F

## DESCRIPTION

The C7061A and C7061F detector models are identical except for housings.

Model C7061F detector is for use in installations requiring explosion proof packaging. The housing is conform the EExd IIC T6 classification. More details for the explosion proof housing can be found in the chapter Standards and approvals. The C7061F model has a 1-inch NPT tapping for mounting onto a sight pipe.

For allowable mounting positions of model C7061A and model C7061F, see page 9.

The terminal block on both models is of wire clamp type with removable screws and is situated in the compartment of the C7061.

The UV cell contains an ultraviolet sensing tube, shutter assembly, terminal block and magnifying lens. The UV sensor can be mounted from the programmer/flame switch up to a length of 300 m.

## FEATURES

- Oscillating shutter interrupts ultraviolet radiation reaching the UV sensor 12 times per minute (when used with R7861 amplifier in combination with 7800 SERIES) to provide the UV sensor tube checking function. When used with with R7061 amplifier in combination with R4348 or R7241 flame switch, the shutter frequency is 60 times per minute. Amplifier circuitry components are checked from the microprocessor in the 7800 Series Control.
- Detectors can be mounted horizontally, vertically or at any angle in between. The self-checking C7061 models require faceplate alignment and have integral locating reference points to assure proper operation of the shutter mechanism.
- Ultraviolet radiation sensing tube and quartz viewing window are field replaceable.
- Two flame detectors can be wired in parallel to reduce nuisance shutdowns in difficult flame sighting applications.
- A swivel mount is available to facilitate flame sighting.
- $-40^{\circ}\text{C}(-40^{\circ}\text{F})$  rated ultraviolet sensing tube is available.
- Incorporates UV sensor tube checking feature; used with R7061 and R7861 Dynamic Self-check Amplifiers.
- High pressure 50 psi (345 kPa) quartz viewing window, magnifying lens and antivibration mount are available as accessories.
- Housing meets IP67 enclosure standards.
- C7061F only: explosion-proof housing, meets EExd IIC T6 classification.
- Protective heat block built into mounting flange.

## SPECIFICATIONS

### Models

C7061A: Self checking UV flame detector in standard housing.

C7061F: Self checking in explosion proof housing in explosion-proof housing.

The flame detector is designed for use with either,  
R7061\* Dynamic self-check ultraviolet amplifier and

- R4348 Flame Switch or,
- R7241 Microcomputer burner control system

or with,  
R7861A\* Dynamic self-check ultraviolet amplifier and,

- 7800 SERIES Burner Programmers

### Ambient operating temperature ratings

C7061A: -30 to 70°C (-40 to +160°F)  
(derate ambient 1°F for every 13°F of aspirator temperature over 160°F).

C7061F: -20 to 70°C (-22 to +160°F)

### Storage temperature ratings

- 51 to + 85°C (- 60 to + 185°F)

### Voltage and Frequency

The C7061 is powered from the Flame Safeguard unit, which delivers the necessary voltages to operate the tube and shutter through the R7061 or R7861 Self-Checking Amplifier. The system operates correctly at a nominal voltage (-15%, +10%), 50/60 Hz.

### Flame signal

*Measured at the flame current meter jack.*

C7061 Detector: 1.4 to 5.5 microamps (nominal).

R7061 Amplifier: 2.5 to 5.5 microamps (nominal).

R7861A Amplifier: 1.25 to 5.0 Volts (on keyboard display module).

### Flame signal amplifier

R7061 Dynamic self-check ultraviolet amplifier

R7861A Dynamic self-check ultraviolet amplifier  
(order separately)

### Interchangeability

Models C7061A and C7061F are **not** interchangeable with other flame detector models.

### Shutter frequency

0.2 Hz, nominal (when used in combination with 7800 SERIE). Interrupts the line-of-sight of the detector about 12 times per minute to provide self-checking. Any malfunction in the flame detection system results in a safety shutdown. 1 Hz nominal when used with R4348 or R7241 in combination with R7061 amplifier.

### Pressure rating of quartz viewing window

C7061A: 345 kPa (50 psi) maximum.

C7061F: 690 kPa (100 psi) maximum

### Dimensions

C7061A: see figure 1.

C7061F: see figure 2.

### Housing

C7061A:

*Construction:* cast-aluminum cover.

*Color:* Violet.

Mounting flange (with heat block) and faceplate are separate to provide heat insulation and seal-off.

C7061F:

Meets requirements (explosion-proof): EEx d IIC T6

*Construction:* cast-aluminum cover.

*Color:* Violet. Mounting flange (with heat block) and faceplate are separate to provide heat insulation and seal-off.

### Enclosure

C7061A: Meets IP67 enclosure requirements (indoor, outdoor protection; rain-tight, dust-tight, hose-directed water). Optional water jacket available.

C7061F: IP65 according to DIN 40050

### Weight

C7061A: 3.3 kg (7.3 lb).

C7061F: 6.3 kg (13.9 lb)

### Mounting and orientation

C7061A :

Mounting flange with 3/4 inch NPT internal threads for attaching to sight pipe.

C7061F:

Mounting flange with 1 inch NPT internal threads for attaching to sight pipe. For allowable mounting positions of model C7061A and F, see page 9.

### Wiring connections

C7061A1004:

NEC Class 1 color coded leadwire.

Length: 8 ft (2.4m).

C7061A1020:

Threaded leadwire opening in faceplate: 1/2--14 NPSM internal threads for attaching conduit.

For C7061F only:

*Terminal block:*

Terminal block inside the housing, wire clamp type, removable screws (terminal lugs can be used)

*Cable entry holes:*

One brass cable gland Ex classification: EExdII C, is standard provided in the housing.

Inner sheath diameter 6 to 12 mm

Outer sheath diameter 8.5 to 16 mm

*Tightening torque:*

- cable gland into rear cover plate: 20 Nm

- cap into cable gland: 3 Nm

### Serviceability

Field replaceable viewing window and ultraviolet sensing tube, coil and shutter assembly.

### Maximum cable length

300 meter between sensor and amplifier

### Operational voltage range

The C7061A/F UV detector will function satisfactory between 85% and 110% of the rated voltage

### Design life

Ultraviolet sensing tube: limited life, see sections Troubleshooting and Service.

## DIMENSIONAL DRAWING

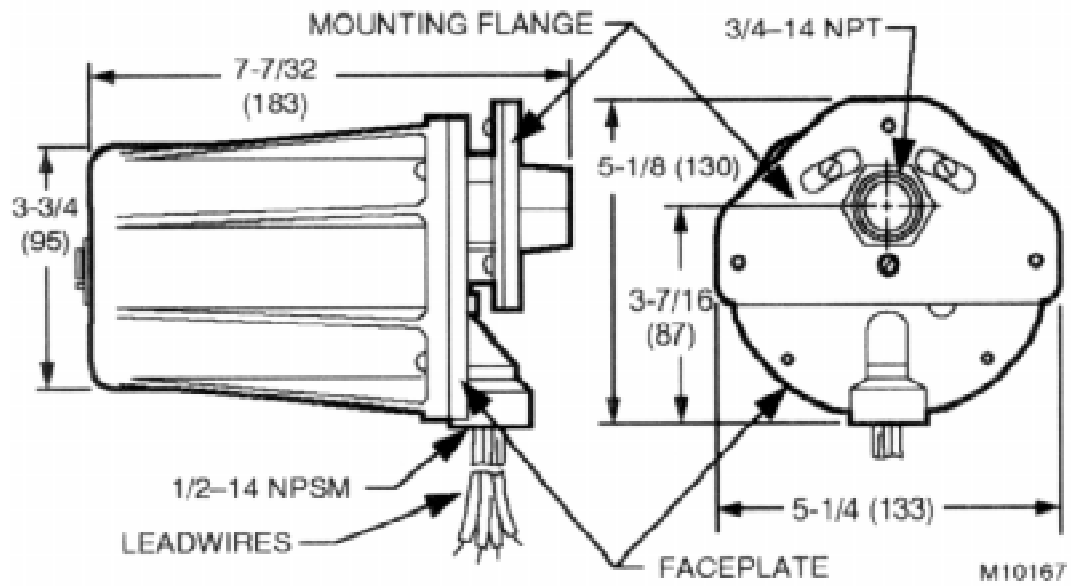


Fig. 1. Dimensional drawing C7061A

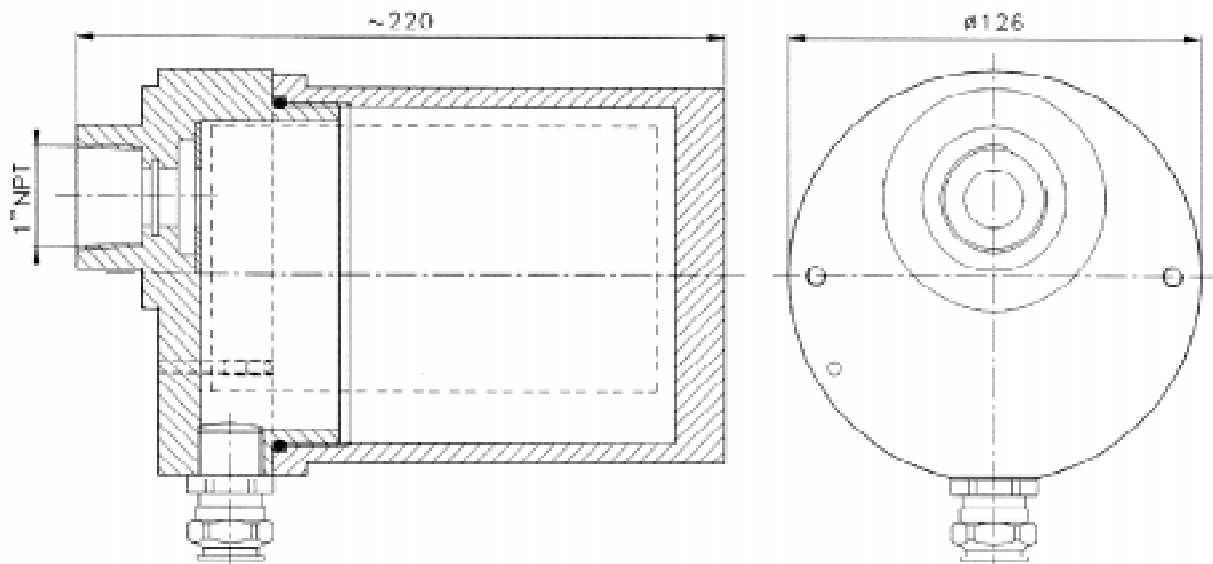


Fig. 2. Dimensional drawing C7061F

## PLANNING THE INSTALLATION

Proper flame detector application is the basis of a safe and reliable flame safeguard installation. Refer to the burner manufacturer's instructions as well to those included here. Follow all instructions carefully.

### CAUTION

1. Do not connect these detectors to non-Honeywell manufactured controls (primaries, programmers, multiburner systems, and burner management systems). Unsafe conditions could result.
2. Disconnect power supply before beginning installation to prevent electrical shock and equipment damage. More than one disconnect may be involved.
3. All wiring must be NEC Class 1 (line voltage).
4. Voltage and frequency of the power supply
5. connected to this detector must agree with the values marked on the detector.
6. Sight the detector so it does not respond to ignition spark.
7. On multiburner installations, each detector must respond only to the flame of the burner it is supervising.

### IMPORTANT

*Do not connect more than two C7061A/F Flame Detectors in parallel.*

### Basic Requirements

The combustion flames of most carbon-based fuels emit sufficient ultraviolet radiation to enable the C7061A/F Solid State (Purple Peeper) Ultraviolet Flame Detector to prove the presence of a flame in a combustion chamber. The detector mounted outside the combustion chamber. Its mounting flange or union is threaded to one end of a sight pipe inserted through the wall of the combustion chamber. The ultraviolet sensing tube in the flame detector sights the flame through the pipe.

When a flame is present, the UV tube in the C7061A/F senses the ultraviolet radiation emitted. The C7061A/F produces a signal that is sent to the amplifier in the flame safeguard control. amplified signal pulls in the flame relay in the control to allow proper operation of the system. Because it is necessary for the UV sensing tube to actually see the flame, it is best to locate the detector as close to flame as physical arrangement, temperature, and other restrictions permit. These restrictions are described in detail in the following paragraphs.

### Determine the location

Before beginning the actual installation, estimate the best location for mounting the detector based upon these factors:

#### 1. Temperature

Install the flame detector where the surrounding temperature will remain within the specified ambient operating temperature ratings.


For the C7061A/F, to keep the detector temperature within specifications, the aspirator temperature must not exceed 107°C (225°F). If the aspirator temperature will exceed temperature ratings, the introduction of cooling-purging air will be required.

#### 2. Vibrations

Do not install the detector where it could be subject of excessive vibration; it shortens the life of the electronic components. Vibrations with a magnitude greater than 1g will require an anti-vibration mount to cushion the detector.

#### 3. Orientation

When assembling the detector, make sure that the viewing window of the detector is facing upwards. Mount the detector horizontal or to a maximum of 90 degrees from horizontal, as indicated in the picture below.

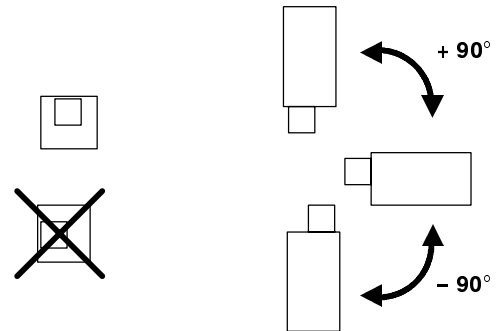

#### 4. Clearance

Make sure there will be enough room to remove the cover of the detector for servicing.

### Radiation sources other than flame

Examples of radiation sources, other than flame, which could actuate the detection system:

#### Ultraviolet sources

- Radiant surfaces above 1200°C (2200°F).
- Sparks from ignition transformers and welding arcs.
- Gas lasers
- Sun lamps
- halogen lamps
- Germicidal lamps
- Incandescent lamps held close to the sensing tube filament above 2200°F).

#### Gamma ray and X-ray sources

- Diffraction analyzers
- Electron microscopes
- Radiographic X-ray machines
- High voltage vacuum switches
- High voltage condensers
- radioisotopes

Except under very unusual circumstances, none of these sources, except a radiant surface or ignition spark, would be present in or near the combustion chamber. The detector *may* respond to a radiant surface at a temperature above 1200°C (2200°F) if both of these conditions are present:

1. the detector sensitivity control is set at (or near) maximum,
2. the surface represents a significant percentage of the detector's field view.

If the temperature or a radiant surface causes the flame relay (in the flame safeguard control) to pull in, re-aim the sight pipe so the detector views a cooler area, or decreases the sensitivity of the detector. Ignition sparks is a rich sources of ultraviolet radiation.

## IMPORTANT

When installing the detector, make sure it does not respond to ignition spark.

## Single burner requirements

The detector must have an unobstructed view of the flame it is supervising under all firing conditions. This implies a proper sighting angle and the minimization of screening effects.

## Sighting angle

The first 30 percent of a flame (the root) radiates the most intense ultraviolet energy. The low angle sighting permits the detector to view a greater depth of the flame root, thus reducing the effects of irregularities in the flame pattern. The best sighting angle is nearly parallel to the axis of the flame, as shown in Figure 5.

NOTE: When possible, it is desirable to tilt the detector and sight pipe *downwards* to prevent the build up of soot in the pipe or on the viewing lens.

In most installations, the detector will need to respond to the, pilot flame alone, then to the pilot and main burner flame together and finally to the main burner flame alone. The detector must meet all sighting requirements which apply:

1. Pilot flame alone -- the smallest pilot flame that can be detected must be capable of reliable ignition the main burner.
2. Pilot and main burner flame together -- the detector must sight the junction of both flames.
3. Main burner flame alone -- the detector must sight the most stable part of the flame for all firing rates

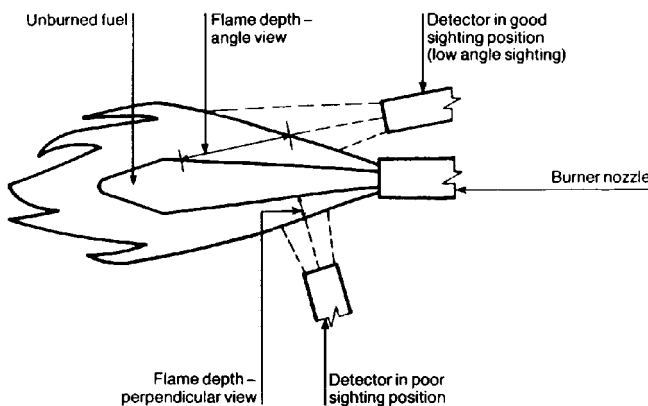


Fig. 5. Sighting angle

## Screening effects

Smoke, fuel mist, dirt and dust are masking agents that absorb ultraviolet radiation from the flame. They create a screen that reduces the amount of ultraviolet radiation reaching the detector and may cause flame signal deterioration resulting in a shutdown. The adverse affects of screening may be minimized by proper burner adjustment, increasing the detector viewing area (shorten sight pipe and/or increase its diameter).

## Multiburner-multifuel requirements

In addition to meeting the requirements for a single burner, a multiburner installation also requires flame discrimination. *Flame discrimination may be defined as the location of all flame detectors such that each detector responds only to the flame(s) produced by the burner it is supervising.*

## Multiburner requirements

In multiple burner systems, not every detector can be positioned so its line of sight does not intercept flames from other burners. This situation occurs in front-fired boiler furnaces having more than one row of burners, or in multilevel opposed-fired furnaces where the burners face each other.

When planning such an installation, *locate each flame detector so that it has the best possible view of the root of the flame(s) it is supervising and the worse possible view of all other flames.*

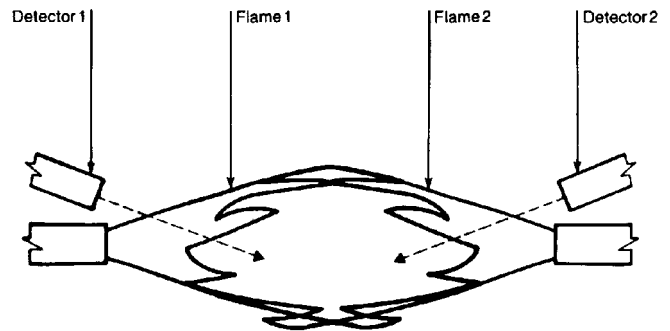


Fig. 6. Critical detector application problem

Figure 6. illustrates a critical detector application problem requiring flame discrimination. Flame discrimination is accomplished by detector 1 by reducing its sensitivity until the flame relay (in the flame safeguard control) does not respond to flame 2. Note that detector 1 is aimed at the root of Flame 1 where UV (ultraviolet) energy is most intensive. Although it sights flame 2 is not aimed at the root of flame 2. The sensitivity of detector 1 is reduced to a point that ensures maximum sensitivity to flame 1 while rejecting flame 2. Similarly, Detector 2 is adjusted to ensure maximum sensitivity to Flame 2 while rejecting Flame 1. If the sensitivity control on a detector is set at its minimum position and flame discrimination cannot be achieved, insert an orifice plate in the sight pipe. An orifice of the proper diameter will reduce the ultraviolet radiation reaching the detector so that the sensitivity can be adjusted to effect flame discrimination.

## Multifuel requirements

Detectors supervising burners that alternately fire more than one fuel may require a different sensitivity level for each fuel. For example, a higher sensitivity is required to reliably sense pulverized coal or No. 2 fuel oil in contrast to natural gas or to No. 2 fuel oil. Reliable flame sensing and flame discrimination may not be maintained simultaneously (without changing the sensitivity setting) when alternating between two fuels. The C7061A/F has two integral sensitivity adjustments that can be remotely and automatically selected. The two sensitivity adjustments can be chosen by means of the fuel selector switch (refer to Remote Sensitivity Selection in the installation section). The sensitivity adjustments should be made for both fuels as described in the section on multiburner requirements, using one adjustment pot for each fuel.

## Parallel flame detectors

Two C7061A/F detectors can be connected in parallel to the same flame signal amplifier and still provide independent sensitivity adjustment. This capability is particular useful for multiburner, multifuel applications.

Shifting flame patterns, commonly encountered on burners with wide turndown ratios, may require parallel detectors to prove the flame at the highest and lowest firing rates. In this case, one detector supervises the pilot (interrupted) and both detectors supervise the main burner flame. During the main

burner “run” period, either detector is capable of maintaining system operation.

In addition to assuring more reliable flame detection, parallel detectors facilitate maintenance during burner operation. Each detector can be removed in turn without shutting down the supervised burner. However, a flame simulating failure occurring in the flame signal amplifier or in either detector will cause a shutdown.

## **Redundant flame detection system**

Two C7061A/F detectors connected to *two* flame signal amplifiers wired in parallel comprise a *redundant* flame detection system. In addition to the features of parallel flame detectors, a redundant system increases reliability and is therefore recommended for critical burner applications. *A flame failure, flame signal loss, or flame simulating failure occurring in either detector subsystem will cause an alarm (not a shutdown), allowing corrective action to avert a shutdown.*



## INSTALLATION

### CAUTION

1. Installer must be a trained, experienced flame safeguard control serviceman
2. Disconnect power supply before beginning installation to prevent electrical shock and equipment damage.
3. All wiring must comply with applicable local electrical codes, ordinances and regulations.
4. Voltage and frequency of power supply connected to this detector must agree with the values marked on the detector.
5. If an air supply is connected to the aspirator on model C7061A/FA, its pressure must equal or exceed that required to seal off the detector from the combustion chamber.
6. On multiburner installation, each detector must respond only to the flame(s) produced by the burner it is supervising.
7. Do not connect more than two detectors in parallel to a single R7476 or R7886A Dynamic self-check ultraviolet amplifier.
8. Perform all required adjustments and checkout tests after installation is complete.

### Install the Sight Pipe

After you have determined the location and sighting angle, select the sight pipe. A black iron pipe with a diameter of at least 1-1/2 in. (38.1 mm) is recommended. Do not use stainless steel or galvanized pipe because they reflect ultraviolet radiation internally and complicate aiming the pipe. Sight pipes with diameters 2 to 3 in. (51 to 76 mm) produce better results for horizontal rotary burners, which require wide viewing angles. A wide viewing angle can also be obtained by using a short sight pipe.

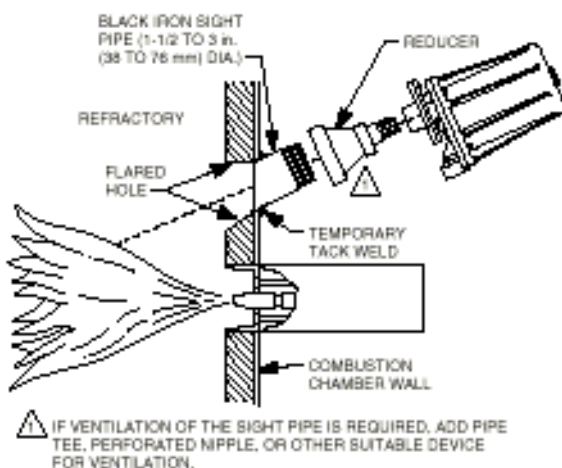


Fig. 7. Typical mounting of C7061A/F

### Prepare Hole in Wall of Combustion Chamber

Cut or drill a hole of the proper diameter for the sight pipe in the wall of the combustion chamber at the selected location. Flare the hole to leave room for small adjustments of the

sighting angle. The taper of the hole should be about 1 in. for every 3 in. (25 mm for every 76 mm) of wall thickness.

### Mount Sight Pipe

Thread one end of the pipe to fit the mounting flange, union, or required coupling. Cut the pipe to the desired length (as short as practicable) and at an angle so it fits flush with the wall of the combustion chamber. Tack weld the pipe to the wall in a trial position. Do not weld the sight pipe permanently in place until after completing the Adjustments and Checkout.

### Install Fittings

In some cases, the sight pipe does not directly fit the C7061A/F mounting flange or union. Also, it may be desirable or necessary to ventilate the sight pipe. You may also want to use a swivel mount or an antivibration mount. Each of these cases may require additional fittings.

### Reducer

For sight pipes of larger diameter than the mounting flange connector or union, install a reducer as illustrated in Fig. 7. The reducer will require a close nipple with these external threads: 3/4 or 1 inch. NPT.

### Sight Pipe Ventilation

It may be necessary to ventilate the sight pipe to cool the detector or to clear a viewing path through UV radiation attenuating material.

For a negative pressure combustion chamber, drilling a few holes in the section of the sight pipe outside of the combustion chamber will allow air at atmospheric pressure to flow through the sight pipe and into the chamber. A perforated pipe nipple between the sight pipe and the detector can also be used.

For a positive pressure combustion chamber, connect a supply of pressurized air from the burner blower to flow through the sight pipe and into the chamber. The air pressure must be greater than the chamber pressure.

### Swivel Mount (C7061A only)

To facilitate proper flame sighting, use part no. 118367A Swivel Mount (not supplied). The swivel mount requires a reducer of the proper size to mount it onto the sight pipe. It also requires a one-inch close nipple for mounting to a C7061 with a one-inch connector. (For 118367A Swivel Mount mounting details, refer to form 60-0361.)

### Antivibration Mount

The detector withstands normal burner vibration. If the vibration is excessive, part no. 123539 Antivibration Mount is available. (For mounting details, see form 60-0361.) If you use this mount, install it before positioning and sighting the detector.

### Mount the Detector

Mount the detector onto the sight pipe, reducer, or other fitting. The C7061A/F Self-Checking Flame Detectors incorporate an oscillating shutter mechanism and, therefore, require special consideration for mounting positions other than vertically sighting downward or upward, as illustrated in Fig. 8. The C7061A/F has notch and arrow indicators (see Fig. 9 and 11) on the faceplate to facilitate mounting in positions other than those shown in Fig. 9. The notch and arrow must be vertically aligned with the notch in the up position and the arrow pointing downward (see Fig. 9). The C7061A/F must be mounted with the conduit opening located approximately 45 degrees below the horizontal (see Fig. 9).

The C7061F has a rivet on the blank aluminium holder. The cell must be positioned so that this rivet is at the top of the installed cell.

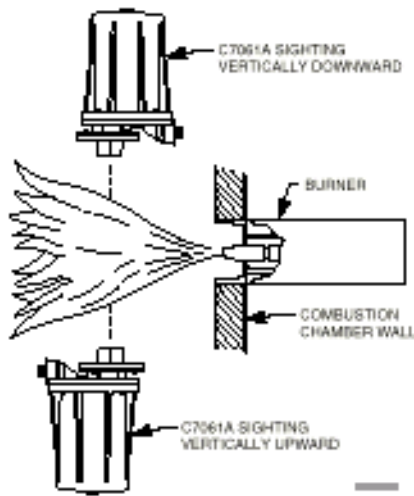


Fig. 8. Vertical mounting of C7061A/F

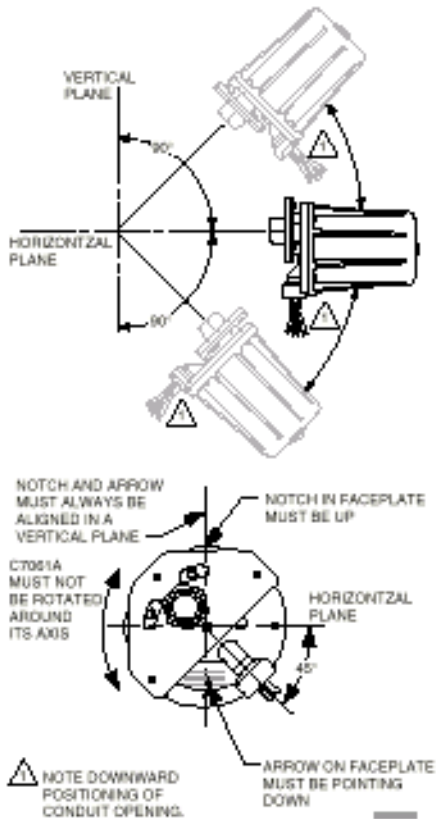


Fig. 9. C7061A mounting positions

**IMPORTANT**

The notch and arrow on the faceplate must be aligned in a vertical plane with the notch up and the arrow pointing down.

The housing must be mounted with the conduit opening approximately 45° below horizontal (see Fig. 9.)

To mount a C7061A (Fig. 10.):

- A The mounting flange is in two pieces. Loosen (but do not remove) the three screws holding the flange together.
- B Slightly rotate the detector so the slots in the back section of the mounting flange clear the screws in the front section; then separate the two sections.
- C Screw the front section of the mounting flange onto the sight pipe, reducer, or other fitting.

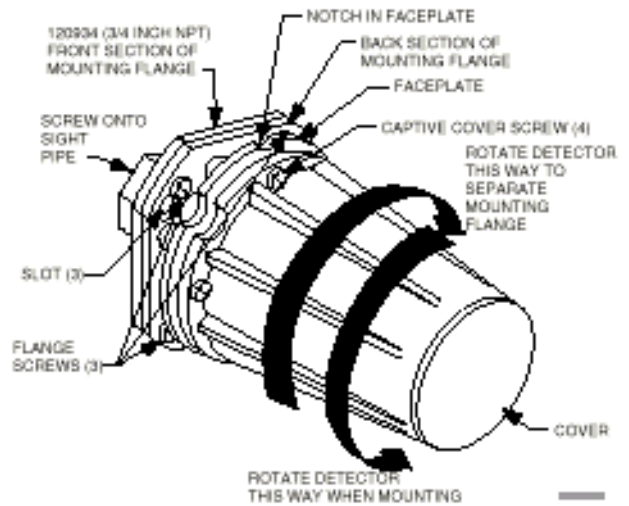


Fig. 10. Mounting the C7061A detector

- D Fit the slots in the back section of the mounting flange (with the detector) over the three screws in the front section, and rotate the detector so the screws hold the flange together.
- E Tighten the screws securely.



Fig. 11. Mounting the C7061F detector

**IMPORTANT**

The rivet on the faceplate must be at the top (see figure 11). The C7061F can be mounted with increments of 120°.

To turn the C7061F (Figure 11.)

- A Loose the 3 screws between the pipe connection and bottom part of
- B Turn the C7061F in the most favourable position.
- C Tighten the screws securely.

## WIRING

### CAUTION

When using a C7061A/F with an R7861 Dynamic Self-Check Amplifier, be careful not to short the white shutter leadwires together (by wiring incorrectly, leaving an incorrect jumper wire, or stripping the insulation too much so the bare leadwires can touch). If the shutter leadwires are shorted during the operation, the amplifier can be permanently damaged and nonoperative.

1. All wiring must comply with applicable local electrical codes, ordinances, and regulations. Use NEC Class 1 wiring
2. Keep the flame signal leadwires as short as possible from the flame detector to the terminal strip or wiring subbase. Capacitance increases with leadwire length, reducing the signal strength. The maximum permissible leadwire length depends on the type of leadwire and conduit type and diameter. The ultimate limiting factor in flame signal leadwire length is the signal current.
3. The detector has color-coded plastic-insulated, no. 18 leadwires, 8 ft (2.4m) long, rated for 221°F (105°C). These wires must be run in a conduit.
4. If the leadwires are not long enough to reach the terminal strip or wiring subbase, make the required splices in a junction box.
5. If splicing is necessary, use moisture-resistant no. 14 wire suitable for at least 167°F (75°C) if the detector is used with a flame safeguard primary control, or at least 194°F (90°C) if used with a flame safeguard programming control.
6. For high temperature installations, use Honeywell specification no. R1298020 wire or equivalent for the F leadwire. This wire is rated up to 400°F (204°C) for continuous duty. It is tested for operation up to 600 volts and for breakdown up to 7500 volts. For the other leadwires, use moisture-resistant no. 14 wire selected for a

temperature rating above the maximum operating temperature.

7. Refer to Fig. 12. for wiring connections.

#### **IMPORTANT**


*Do not run the flame detector wiring in the same conduit with high voltage ignition transformer wires.*

#### **Connecting Detectors in Parallel**

For a flame that is difficult to sight, using two parallel C7061 Flame Detectors reduces nuisance shutdowns. If only one of the parallel detectors loses the flame signal, the other indicates the presence of the flame and keeps the burner running. If two parallel C7061A Detectors are used, a flame-simulating failure in either detector causes the burner to shut down. Two C7061A Detectors can be connected in parallel to the same terminals on 120 volt flame safeguard controls. To avoid exceeding the rating of the solid-state shutter switch in the R7861 Flame Signal Amplifier, do not connect more than two C7061A Detectors in parallel.

#### **IMPORTANT**

Voltage and frequency rating of the C7061A must match the power supply of the flame safeguard control.

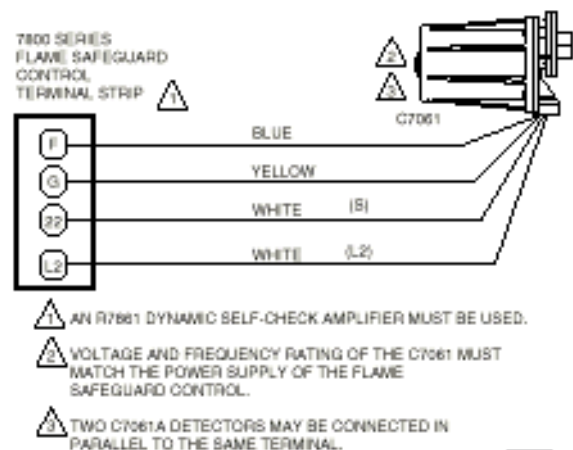

**Fig. 12. Wiring diagram for C7061A Detectors with 7800 Series Flame Safeguard controls with shutter drive circuitry.**

## ADJUSTMENTS AND CHECKOUT

### UV Sensor Tube Test

For initial burner lightoff, consult the burner manufacturer instructions or the instructions for the flame safeguard control. If the system does not start during the initial burner lightoff, check the UV sensor tube in the flame detector. If a reddish glow appears when there is no flame present, replace the UV sensing tube. When performing this test, make sure there are no extraneous sources of ultraviolet radiation in the test area (see Radiation Sources section).

### Adjust Detector Sighting

With the flame detector installed and the burner running, adjust the sighting position of the detector for optimum flame signal.

It is suggested that a volt-ohm meter with a minimum sensitivity of one megohm/volt and a zero to five or ten Vdc scale be used for R7861 Amplifier flame signal measurements.

Measure the flame signal as illustrated in Fig. 13. Be careful to make the proper connections of positive (red) meter lead to positive (+) control jack and negative (black) meter lead to negative (-) or (-Com) jack with 7800 SERIES controls. When the 7800 SERIES control has the Keyboard Display Module, a zero to five Vdc voltage is displayed on the module.

NOTE: 1. The shutter operation causes fluctuations in the voltage reading. Read the average stable reading, disregarding the peaks.

NOTE: 2. The flame signal must be steady (or stable as described in NOTE 1).

Move the detector and sight pipe around to sight the flame from various positions and angles. Try to get a maximum steady (or stable) reading on the meter. The signal must be above the minimum acceptable voltage listed in Table 1. Measure the flame signal for the pilot alone, the main burner flame alone, and both together (unless monitoring only the pilot flame when using an intermittent pilot, or only the main burner flame when using direct spark ignition). Also measure the flame signal at low and high firing rates and while modulating in between (as applicable). With the detector in its final position, all required flame signals must be steady (or stable) and as specified in Table 1. If you cannot obtain the proper signal, refer to the Troubleshooting section.



Fig. 13. Measuring voltage flame signal with 7800 SERIES controls.

### Pilot Turndown Test

If the detector is used to prove a pilot flame before the main fuel valve(s) can be opened, perform a Pilot Turndown Test before welding the sight pipe into position. Follow the procedures in the flame safeguard control instructions and in the burner manufacturer instructions.

### Ultraviolet Response Tests Ignition Spark Response Test

Test to make certain that ignition spark is not actuating the flame relay in the flame safeguard control.

- A Close the pilot and main burner manual shutoff valves.
- B Start the burner and run through the Ignition period. Ignition spark should occur, but the flame LED must not light. The flame signal should not be greater than 0.25 Vdc.
- C If the flame relay does pull in, reposition the detector farther from the spark, or relocate/resight the detector to eliminate/reduce the detector response to reflected UV radiation. It may be necessary to construct a barrier to block the ignition spark from the detector view. Continue adjustments until the flame signal due to ignition spark is less than the flame signal values indicated in step B.

### Response to other Ultraviolet Radiation Sources

Some sources of artificial light produce small amounts of ultraviolet radiation. Under certain conditions, an ultraviolet detector responds to them as if it is sensing a flame. Do not use an artificial light source to check the response of an ultraviolet flame detector. To check for proper detector operation, conduct flame failure response tests under all operating conditions.

### Weld the Sight Pipe

When the flame signal is acceptable after all adjustments are made, remove the detector and weld the sight pipe in its final position. (If you are using a swivel mount, the pipe may already be welded.) Then reinstall the detector.

### Final Checkout

Before putting the burner into service, check out the installation using the Checkout procedures in the Instructions for the appropriate flame safeguard control. After completing the Checkout, run the burner through at least one complete cycle to verify correct operation.



## CAUTION

Do not put the system into operation until all Checkout tests in the Instructions for the appropriate flame safeguard control and any others specified in the burner installation instructions are satisfactorily completed.

## TROUBLESHOOTING



### CAUTION

1. Be extremely careful while troubleshooting the detector; line voltage is present on some of the terminals when power is on.
2. Open the master switch to disconnect power before removing or installing the detector or its cover. More than one disconnect may be involved.

### Equipment Required

A volt-ohm meter with a minimum sensitivity of one megohm/volt and a zero to five or ten Vdc scale is suggested. When the Keyboard Display Module is included with the control, a flame signal displays on the module. For replacement parts, see Specifications section.

### UV Sensor Tube Test

See UV Sensor Tube Test section.

### Unsatisfactory Flame Signal

If a satisfactory flame signal (see Table 1) cannot be obtained while adjusting the sighting position of the detector, follow these procedures. If you encounter other problems in the system, refer to the Troubleshooting section in the instructions for the appropriate flame safeguard control.

**NOTE:** For instructions for replacing the viewing window, sensing tube, and coil and shutter assembly, see the Service section.

### Troubleshooting Procedures

First perform the Preliminary Inspection. Then follow the applicable procedures for either a low reading or a zero reading on the meter. After reinstalling the detector or replacing its cover, recheck the meter reading. To try to obtain the proper flame signal, adjust the position of the detector. If you complete all of the procedures and still cannot obtain a proper flame signal, replace the detector.

### Preliminary Inspection

**A** Check for the proper line voltage. Make sure the master switch is closed, connections are correct, and power supply is of the correct voltage and frequency.

**B** Check the detector wiring for defects:

- a. Incorrect connections.
- b. Wrong type or size of wire.
- c. Deteriorated wire.
- d. Open circuits.
- e. Short circuits.
- f. Leakage paths caused by moisture, soot, or dirt.

**C** With the burner running, check the temperature at the detector. If it exceeds 79°C (175°F):

- a. Add additional insulation between the wall of the combustion chamber and the detector.
- b. Add a shield or screen to reflect radiated heat away from the detector, or
- c. Add cooling (refer to Sight Pipe Ventilation and Accessories sections).

### Removing the Detector from the Sight Pipe

Loosen the three screws holding the mounting flange together; rotate the detector slightly so the screws clear the slots in the back section of the flange; separate the flange; and pull off the back section (with the UV sensor).

**NOTE:** The detector will be free as soon as the collar is unscrewed; do not drop it.

### Procedure for a Zero Meter Reading

**A** Replace the plug-in amplifier. Then recheck the flame signal.

**B** Replace the ultraviolet sensing tube (see Service section). Then recheck the flame signal.

**C** Replace the coil and shutter assembly (see Service below). Then recheck the flame signal.

**D** If you still cannot obtain a meter reading, replace the detector.

### IMPORTANT

At the completion of Troubleshooting, be sure to perform the Adjustments and Checkout procedures.

## SERVICE

### CAUTION

Open the master switch to disconnect power before removing or installing the detector or its cover. More than one disconnect can be involved.

### Periodic Maintenance

A Clean the viewing window (or focusing lens) when necessary. Remove the detector (see Troubleshooting section) and use a clean cloth over the eraser end of a pencil. Do not remove the window (or lens) to clean it. If it is broken or damaged or it is coated with a substance that cannot be cleaned off, replace it (see Fig. 16.).

B Keep the flame detection system adjusted for the smoothest, most reliable operation as recommended by the burner manufacturer.

C Replace the sensing tube, coil and shutter assembly, or viewing window only when necessary to obtain proper operation.

### Removing the Detector Cover All Models:

#### Open the Master Switch.

Unscrew the four captive cover screws (Fig. 10. and 11. ) and carefully slide off the cover.

NOTE: These bolts are removable. Put them in a safe place to avoid losing them.

### Replacing the Ultraviolet Sensing Tube, All Models

A Open the master switch and remove the cover from the detector (see instructions above).

B Locate the UV sensing tube.

#### **IMPORTANT**

Be very careful not to kink or otherwise damage the flexible shutter.

C Gently bend the alignment guide just enough to free the tip of the tube.

D Insert a screwdriver between the tube base and socket, and gently pry the tube out of its socket.

E Pull the tube out of its socket.

F Insert the new tube through the openings in the shutter assembly.

G Align the three pins on the new tube with the holes in the socket.

H Carefully push the new tube firmly into the socket; the alignment guide will snap into place around the tip of the tube. I Make sure the new UV sensor tube is seated securely.

J Replace the detector cover.

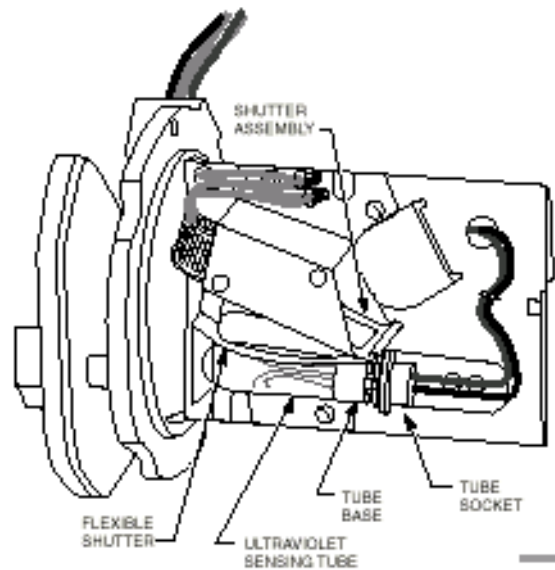


Fig. 14. Replacing ultraviolet radiation sensing tube.

### Replacing the Coil and Shutter Assembly

NOTE: Use only a 190971B Coil and Shutter Assembly.  
A Open the master switch and remove the detector cover (see Removing the Detector Cover section).

B Remove the ultraviolet sensing tube (steps A through E of Replacing the Ultraviolet Sensing Tube section).

C Cut the white wires as close as possible to the crimped connectors, and remove the crimped connectors.

D Remove the three mounting screws from the base of the coil and shutter assembly. Put the screws in a safe place.

E Remove the coil and shutter assembly.

F Put the new coil and shutter assembly into place.

#### **IMPORTANT**

Be very careful not to kink or otherwise damage the flexible shutter.


G Insert the three mounting screws into the base of the coil and shutter assembly and tighten securely.

H Remove sufficient insulation from each of the two white leadwires remaining on the detector, and also from each of the two white leadwires on the new coil.

I Using solderless connectors, connect one of the coil wires to one of the remaining white leadwires. Connect the other coil wire to the other remaining white leadwire.

J Reinstall the sensing tube (steps F through I of Replacing the Ultraviolet Sensing Tube section).

K Replace the detector cover.

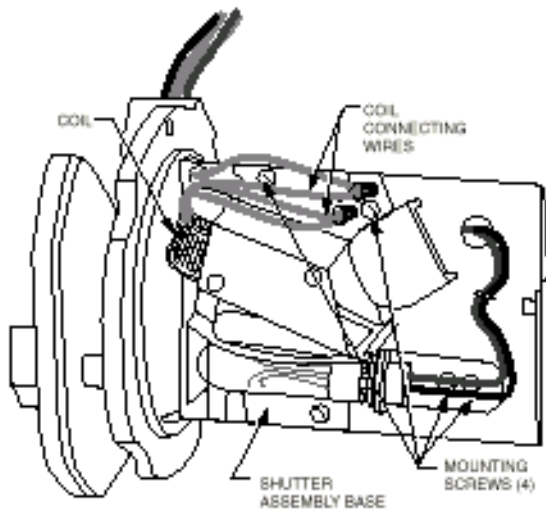

**Fig. 15. Replacing coil and shutter assembly.  
Replacing the Quartz Viewing Window (or Focusing Lens) C7061A Only**

**IMPORTANT**

*A quartz window or lens must be used. Ordinary glass absorbs or filters out ultraviolet radiation.*

A Open the master switch; remove the detector from the sight pipe and remove the detector cover. (See appropriate sections.)

B Remove the ultraviolet sensing tube (steps A through E of Replacing the Ultraviolet Sensing Tube section).

C Loosen the three screws holding the back section of the mounting flange to the faceplate. Carefully remove and keep together the three screws, the gray asbestos-neoprene gasket, the red rubber washer, and the back section of the mounting flange.

NOTE: If the viewing window (with its rubber mounting gaskets) is stuck to the mounting flange, skip step D.

**IMPORTANT**


Be very careful not to kink or otherwise damage the flexible shutter.

D Using the eraser end of a pencil, push out the viewing window (with its rubber mounting gaskets) from the inside of the faceplate.

E Insert one rubber mounting gasket into the window aperture in the faceplate.

F Insert the new quartz viewing window (or focusing lens)

into the window aperture with either side toward the flame.

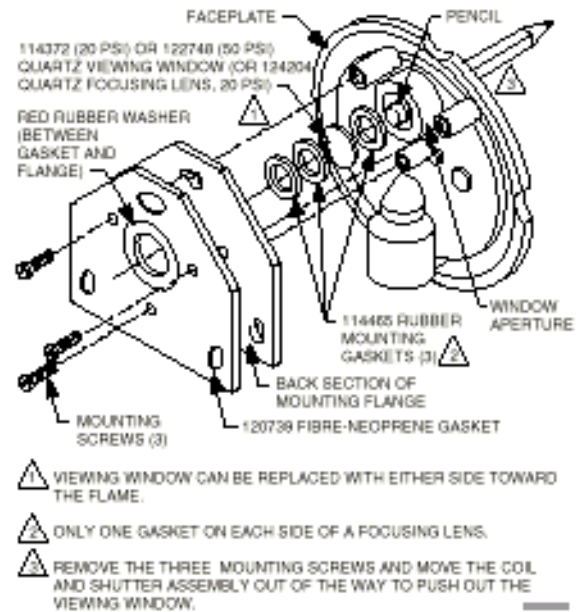

**Fig. 16. Replacing quartz viewing window or focusing lens.**

G Insert two rubber mounting gaskets (only one gasket when replacing a focusing lens) into the aperture.

H Put the back section of the mounting flange, rubber washer, and asbestos-neoprene gasket in place on the faceplate, and securely tighten the three mounting screws.

NOTE: Make sure the red rubber washer between the gray fiber-neoprene gasket and the back section of the mounting flange does not protrude over the window aperture or otherwise obscure the detector line-of-sight.

I Clean the viewing window (or focusing lens) on both sides using a clean cloth placed over the eraser end of a pencil.

J Reinstall the sensing tube (steps F through I of Replacing the Ultraviolet Sensing Tube section).

K Replace the detector cover and reinstall the detector on the sight pipe.

**Replacing the Quartz Viewing Window (or Focusing Lens) C7061F Only**

**IMPORTANT**

*A quartz window or lens must be used. Ordinary glass absorbs or filters out ultraviolet radiation.*

## STANDARDS AND APPROVALS

### Models C7061A and F

C7061A and F Ultraviolet Flame Detector conform with following EC--Directives:

- Gas Appliance Directive (90/396/EEC).  
according to European standard:  
EN298 approved with R7861 and R7061 flame amplifiers.
- Low Voltage Directive (73/23/EEC)  
according to European standard:  
EN60730--2--5
- Electro Magnetic Compatibility Directive (89/336/EEC)  
according European standards:  
EN55011 class B regarding emission.  
EN50082--2 industrial level regarding immunity.

### Model C7061F

In addition to above information, C7061F conforms with:

- Explosive Atmospheres Directive (94/9/EC)  
according to European standards:  
EN50014  
EN50018  
EN50019

For further details see table 1.

### Other approvals (C7061A only)

Underwriters Laboratories Inc. Listed.  
Canadian Standards Association Certified: Master File  
LR95329-1.  
Factory Mutual Approved: 14740.01.  
Industrial Risk Insurers Acceptable.

**Table 1. list of Ex certificates of model C7061F**

Description	Type	Manufacturer	Certificate	Ex classification
EExd housing	AD432002	IDRM	enclosed	EExd IIC T6
Bras cable gland	ADL	CAPRI	enclosed	EExd IIC
Optional bras cable gland	501/453/UNIV	Hawke	on request	EExd IIC





## **INERIS**

INSTITUT NATIONAL DE L'ENVIRONNEMENT  
INDUSTRIEL ET DES RISQUES

Parc Technologique ALATA  
B.P. N° 2 - 60550 Verneuil-en-Halatte - France  
Tél. : (33) 44 55 66 77 - Fax (33) 44 55 67 04  
Télex : 140 094 F

### MATERIEL ELECTRIQUE UTILISABLE EN ATMOSPHERE EXPLOSIBLE

## (1) **CERTIFICAT DE CONFORMITE**

(2) **INERIS 94.C 5007 X**

(3) Le présent certificat est délivré pour le matériel électrique :

**COFFRET D'APPAREILLAGE TYPES AD 432001 et AD 432002**

(4) Construit et soumis à la certification par :

I.D.R.M  
Z.I DE COMPANS  
BP N° 45  
26, rue Marc Seguin  
F - 77290 MITRY MORY

(5) Ce matériel et ses variantes éventuelles acceptées sont décrits dans l'annexe de ce certificat et dans les documents descriptifs cités dans cette annexe.

(6) L'INERIS, organisme agréé conformément à l'article 14 de la Directive du Conseil des Communautés Européennes 76/117/CEE du 18 décembre 1975,

- certifie que ce matériel électrique est conforme aux Normes Européennes qui lui sont applicables, soit :

EN 50 014 - 1977 (NF C 23 514 - 1982) + A1 à A5  
EN 50 018 - 1977 (NF C 23 518 - 1982) + A1 à A3

- et qu'il a subi avec succès les vérifications et épreuves de type prescrites par ces normes

- certifie avoir établi un procès-verbal confidentiel de ces vérifications et épreuves.

(7) Le marquage du matériel électrique doit comporter le code suivant :

EEx d IIC T6 ou T5

- (8) Par le marquage du matériel électrique livré, le fournisseur atteste, sous sa propre responsabilité, que ce matériel est conforme aux documents descriptifs cités dans l'annexe et qu'il a subi avec succès les vérifications et épreuves individuelles prescrites par les Normes Européennes mentionnées en (6). Ces vérifications et épreuves sont rappelées dans l'annexe.
- (9) Ce matériel électrique est autorisé à porter la marque distinctive communautaire définie dans l'annexe II de la Directive 79/196/CEE du 6 Février 1979.

Cette marque figure sur la première page du présent certificat.

Verneuil-en-Halatte, le 1994 01 19

Le Directeur de l'Organisme Certificateur,  
Par délégation, le  
Chef du Département Systèmes  
Electriques et Electroniques de Sécurité  
C. DAVROU



A handwritten signature in black ink, appearing to read 'C. Davrou', written over a horizontal line.

## ANNEXE

### COFFRET D'APPAREILLAGE TYPES AD 432001 et AD 432002

#### I - DESCRIPTION

Deux tailles de coffret sont prévues.

Le coffret se compose d'un corps fermé par un capot vissé, le capot pouvant recevoir un bouchon vissé.

L'ensemble peut être réalisé en alliage léger en acier ou en acier inoxydable.

Le coffret peut être équipé des différents éléments suivants :

- axes de commande, passages d'axes, passages d'axes sur roulement,
- hublots en verre, en quartz ou en MAKROLON, de diamètre visible 18 mm,
- traversées de courant multifilaires, uniquement dans le cas de montage "en cloison" entre deux enveloppes EEx d d'un type certifié,
- hublots en MAKROLON de diamètre 70, 80 ou 90 mm pouvant être équipés de passages d'axes avec douilles filetés,
- socle de prise de courant certifiée IDRM type AD 453..1

Le coffret peut aussi recevoir les composants Ex suivants :

- auxiliaires de commande type A.U.X.-d certificat LCIE 87.0006 U,
- traversée pneumatique type XW8 TL1 certificat LCIE 88.B 0008 U,
- bouchon d'obturation type B.V.X certificat LCIE 85.B 0007 U.

Les différents accessoires ainsi que les composants peuvent être montés soit sur le capot soit sur le corps.

Le coffret équipé de hublots et d'entrées de câble ou de bouchons, présente un degré de protection IP 65.

L'ensemble de l'appareillage pouvant être contenu, ainsi que sa disposition, sont définis dans les documents descriptifs.

Le - raccordement aux circuits extérieurs est réalisé par l'intermédiaire d'entrées de câble d'un type certifié.

## ANNEXE

II - DOCUMENTS DESCRIPTIFS

Les documents cités ci-après, présentés et signés par le pétitionnaire, constituent le dossier descriptif du matériel objet de la présente certification.

Notice descriptive (6 pages)		signée le 23.12.1993
Plan n° 93-005 page 1	du 15.11.1993	signé le 23.12.1993
Plan n° 93-005 page 2	du 15.11.1993	signé le 23.12.1993
Plan n° 93-005 page 3	du 15.11.1993	signé le 23.12.1993
Plan n° 93-005 page 4	du 15.11.1993	signé le 23.12.1993
Plan n° 93-005 page 5	du 15.11.1993	signé le 23.12.1993
Plan n° 93-005 page 6	du 15.11.1993	signé le 23.12.1993
Plan n° 93-005 page 7	du 15.11.1993	signé le 23.12.1993
Plan n° ID 035 Rev A	d'Octobre 1992	signé le 23.12.1993
Plan n° ID 036 Rev A	d'Octobre 1992	signé le 23.12.1993
Plan n° ID 038	du 17.03. 1992	signé le 23.12.1993
Plan n° ID 039	du 17.03. 1992	signé le 23.12.1993
Plan n° ID 043	du 25.03. 1992	signé le 23.12.1993
Plan n° ID 043 A	du 25.03. 1992	signé le 23.12.1993
Plan n° ID 044 Rev A	d'Octobre 1992	signé le 23.12.1993
Plan n° ID 044 A Rev A	d'Octobre 1992	signé le 23.12.1993
Plan n° ID 046 Rev A	d'Octobre 1992	signé le 23.12.1993
Plan n° ID 046 A Rev A	d'Octobre 1992	signé le 23.12.1993
Plan n° ID 047	du 25.03.1992	signé le 23.12.1993
Plan n° ID 049	de Mai 1992	signé le 23.12.1993
Plan n° ID 050 Rev A	de Janvier 1994	signé le 23.12.1993
Plan n° ID 053 Rev A	d'Octobre 1992	signé le 23.12.1993
Plan n° ID 057 Rev A	d'Octobre 1992	signé le 23.12.1993
Plan n° ID 059 Rev A	d'Octobre 1992	signé le 23.12.1993
Plan n° ID 060 Rev A	d'Octobre 1992	signé le 23.12.1993
Plan n° ID 069	du 15.11.1993	signé le 23.12.1993
Plan n° ID 070	du 15.11.1993	signé le 23.12.1993
Plan n° ID 071	du 15.11.1993	signé le 23.12.1993
Plan n° ID 072	du 15.11.1993	signé le 23.12.1993
Plan n° ID 073	du 15.11.1993	signé le 23.12.1993
Plan n° ID 074	du 15.11.1993	signé le 23.12.1993
Plan n° ID 075	du 15.11.1993	signé le 23.12.1993
Plan n° ID 076	du 15.11.1993	signé le 23.12.1993

## ANNEXE (suite)

### III - MARQUAGE

Le marquage doit être visible, lisible et durable, il doit comporter les indications suivantes :

I.D.R.M	ou	I.D.R.M
AD 432001		AD 432002
(Numéro de fabrication)		(Numéro de fabrication)
EEx d IIC T6 ou		EEx d IIC T6 ou
EEx d IIC T5		EEx d IIC T5
INERIS 94.C 5007 X		INERIS 94.C 5007 X

#### NE PAS OUVRIR SOUS TENSION

Dans le cas où le coffret comporte des sectionneurs dont le pouvoir de coupure n'est pas au moins conforme à la capacité AC-3, la mention près du sectionneur :

"NE PAS MANOEUVRER EN CHARGE"

Le matériel doit aussi porter le marquage normalement prévu par les normes de construction du matériel électrique.

### IV - PARAMETRES ELECTRIQUES RELATIFS A LA SECURITE

Puissances maximales dissipées :

Classe de Température	Type du coffret et puissances en Watts	
	AD 432001	AD 432002
classe T6	7 watts	12 watts
classe T5	10 watts	18 watts

## A N N E X E (suite)

### V - EPREUVE INDIVIDUELLE

Conformément à 15.2 de la norme EN 50 018, le matériel est dispensé d'épreuve individuelle, compte tenu qu'il a subi une épreuve de surpression statique égale à 4 fois la pression de référence soit 32 bar.

### VI - CONDITION SPECIALE POUR UNE UTILISATION SURE

Les traversées de courant ne peuvent être installées sur le coffret, que lorsqu'elles sont en "cloison" de séparation entre deux coffrets EEx d d'un type certifié.

Le socle de prise de courant IDRM type AD453-1 doit toujours être équipé de sa fiche correspondante ou d'un bouchon d'obturation.



LABORATOIRE CENTRAL  
DES INDUSTRIES ELECTRIQUES



33, avenue du Général Leclerc  
F 92260 Fontenay-aux-Roses  
Tél. : (1) 40.95.60.60 - Télex LABELEC 250080 F

MATÉRIEL ÉLECTRIQUE POUR ATMOSPHÈRES EXPLOSIBLES

(1) **CERTIFICAT DE CONFORMITE**

(2) L.C.I.E. 91.C6092 X

(3) Le présent certificat est délivré pour le matériel électrique :

Entrée de câble antidéflagrante

Type ADL

(4) construit et soumis à la certification par :

C A P R I

36, Rue des Fontenils

41600 - NOUAN-LE-FUZELIER -

(5) Ce matériel électrique et ses variantes éventuelles acceptées sont décrits dans l'annexe de ce certificat et dans les documents descriptifs cités dans celle-ci.

(6) Le L.C.I.E, organisme agréé conformément à l'article 14 de la directive du conseil des communautés européennes 76/117/CEE du 18 décembre 1975,

- certifie que ce matériel électrique est conforme aux normes européennes harmonisées :

EN 50014 (1977), NF C 23514 (1982) + amendements 1 à 5

EN 50018 (1977), NF C 23-518 (1982) + amendements 1 et 3

et qu'il a subi avec succès les vérifications et épreuves de type prescrites par ces normes,

- certifie avoir établi un procès-verbal confidentiel de ces vérifications et épreuves.

(7) Le marquage du matériel électrique doit comporter le code suivant :

EEx d IIC

(8) Par le marquage du matériel livré, le fournisseur atteste, sous sa propre responsabilité que ce matériel est conforme aux documents descriptifs cités dans l'annexe et qu'il a subi avec succès les vérifications et épreuves individuelles prescrites par les normes européennes harmonisées mentionnées en (6) et rappelées dans l'annexe.

(9) Ce matériel électrique est autorisé à porter la marque distinctive communautaire définie dans l'annexe II de la directive 79/196/CEE du 6 février 1979. Cette marque figure sur la première page du présent certificat.

Fontenay-aux-Roses, le 26 août 1991

Le Responsable des Essais,

Le Directeur de l'organisme certificateur,



M. LIVERNAULT  
Chef de section



P. de MANEVILLE  
Chef de Division



## ANNEXE

### ENTREE DE CABLE ANTIDEFLAGRANTE TYPE ADL -

#### DESCRIPTION DU MATERIEL -

Ces entrées de câbles métalliques sont destinées au raccordement électrique de câble avec amarrage et étanchéité externe sur des appareils antidéflagrants. Elles sont réalisées en différents modèles filetés NPT, ISO ou PG.

#### DOCUMENTS DESCRIPTIFS -

- Notice descriptive                    du 15.05.91
- Plan n° 1000                         du 15.05.91

#### PARAMETRES RELATIFS A LA SECURITE -

Capacité de serrage pour l'étanchéité externe : diamètre 10,5 à 40,5 mm,  
suivant modèle

Capacité de serrage pour l'étanchéité interne : diamètre 6,5 à 33 mm,  
suivant modèle.

#### MARQUAGE -

Le matériel ci-dessus défini devra porter le marquage suivant :

C A P R I  
A D L  
EEx d IIC  
l'indication du filetage  
LCIE 91.C6092 X

Le matériel devra également comporter le marquage normalement prévu par les normes de construction du matériel électrique.

#### EPREUVE INDIVIDUELLE -

Le matériel est dispensé de l'épreuve individuelle.

#### CONDITIONS SPECIALES POUR UNE UTILISATION SURE -

Lors du montage sur une enveloppe antidéflagrante, l'implantation et l'assemblage réalisés devront être conformes aux indications prévues sur les documents descriptifs du constructeur.

## ORDERING INFORMATION

**When ordering specify:**

- Model number.

**Order separately:**

- R7061 Dynamic Self-Check Ultraviolet Amplifier.

- R7861A Dynamic Self-Check Ultraviolet Amplifier.
- Replacement parts, if desired.
- Accessories, if desired
- Programmer/flame switch.

## REPLACEMENT PARTS AND ACCESSORIES

### Replacement parts for model C7061A and C7061F

129464M Ultraviolet Sensing Tube.  
129464N Ultraviolet Sensing Tube; for -40°F (-40°C) operation.  
1909710B Coil and Shutter Assembly.

### Replacement parts for model C7061A

114372 Quartz Viewing Window; rated for 20 psi (138 kPa).  
114465 Gasket, silicone rubber; for installing viewing window (three required).  
120739 Gasket, fiber-neoprene; heat insulation and seal-off for mounting flange.

### Accessories for model C7061A and C7061F

118367A Swivel Mount.  
118369 Bushing, galvanized iron, with 3/4 inch NPT internal

threads on one end and 1 inch NPT external threads on the other end. For adapting a detector with 1 inch NPT internal threads (for mounting) to a 3/4 inch sight pipe, or to the pipe nipple and tee for connecting an air supply.

120934 Mounting Flange, aluminum, with 3/4 inch NPT internal threads for attaching to sight pipe.

124198 Mounting Flange, aluminum, with 1 inch NPT internal threads for attaching to sight pipe.

123539 Antivibration Mount.

124204 Quartz Focusing Lens, rated for 20 psi (138 kPa); for increasing the detector-sensed ultraviolet radiation.

### Accessories for model C7061A

122748 Quartz Viewing Window, rated for 50 psi (345 kPa).  
190105 Water Jacket.